COUNTY SMD adaptor settings

Undf Code

feed direction



wrong direction setting

counter decrements

feed direction



correct direction setting

counter

